HOME
DECORATORS
COLLECTION

BF-25389 BUFFORD LINEN CABINET 65"Hx21"Wx14"D

INV#28259

ASSEMBLY INSTRUCTIONS

Made In China

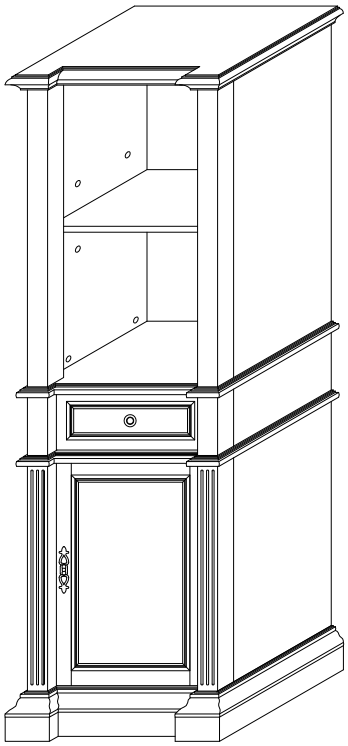

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  TOP PANEL-1PC	B  UP LEFT SIDE PANEL-1PC	C  UP RIGHT SIDE PANEL-1PC
D  UP ACROSS PANEL-1PC	E  MIDDLE LEFT SIDE PANEL-1PC	F  MIDDLE RIGHT SIDE PANEL-1PC
G  MIDDLE ACROSS PANEL-1PC	H  DOWN LEFT SIDE PANEL-1PC	I  DOWN RIGHT SIDE PANEL-1PC
J  BOTTOM PANEL-1PC	K 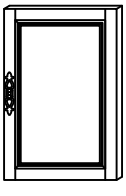 DOOR-1PC	L  SHELVES-2PCS

M 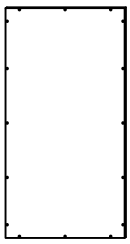 UP BACK PANEL-1PC	N 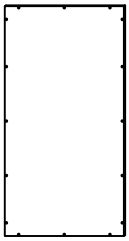 DOWN BACK PANEL-1PC	O  DRAWER PANEL FRONT-1PC
P 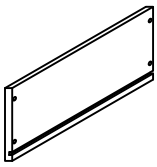 LEFT DRAWER PANEL SIDE-1PC	Q 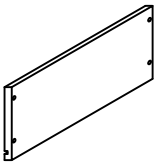 RIGHT DRAWER PANEL SIDE-1PC	R DRAWER PANEL BACK-1PC
S  DRAWER PANEL BOTTOM-1PC	T CAM-TOOL-1PC	U 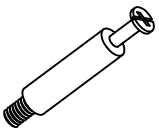 CAM-BOLTS-24PCS
V CAM-LOCKS-24PCS	W KNOB-1PC	X 8mm× 5/8" SCREWS-2PCS
Y HANDLE-1PC	Z  FEET-4PCS	A1 7mm× 5/8" SCREWS-34PCS
B1  MAGNET-1PC	C1 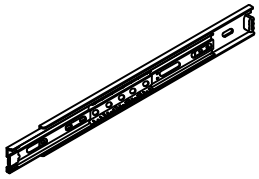 OUTER SLIDES-2PCS	D1 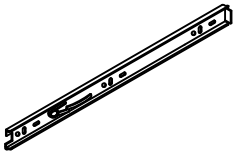 INNER SLIDES-2PCS

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

E1 6mm× 1/2"  SCREWS-10PCS	F1 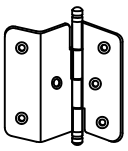 HINGES-2PCS	G1 7mm× 5/8"  SCREWS-12PCS
H1 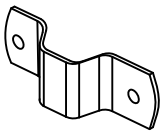 HOOKS-4PCS	I1 6mm× 3/4"  SCREWS-12PCS	J1 GECKOS-4PCS
K1 7mm× 7/8"  SCREWS-4PCS	L1 PLASTIC BELTS-2PCS	M1  FEMALE MAGNET-1PC
N1 5mm× 1/2"  SCREW-1PC	O1  SHELF SUPPORTS-8PCS	

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO THE FINISH DURING SHIPMENT IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY. PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

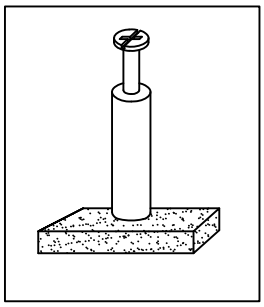

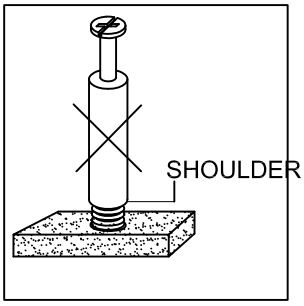

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

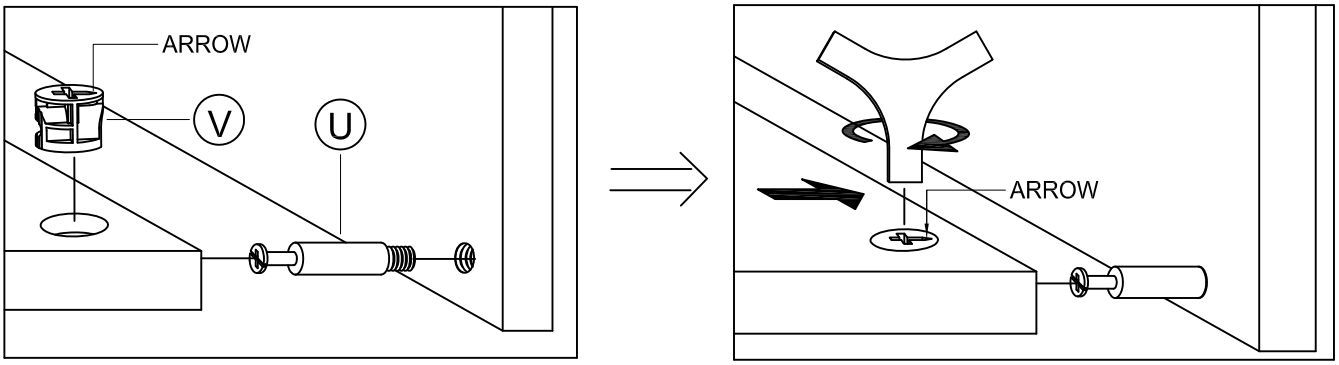

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

HOW TO SEPARATE GLIDES

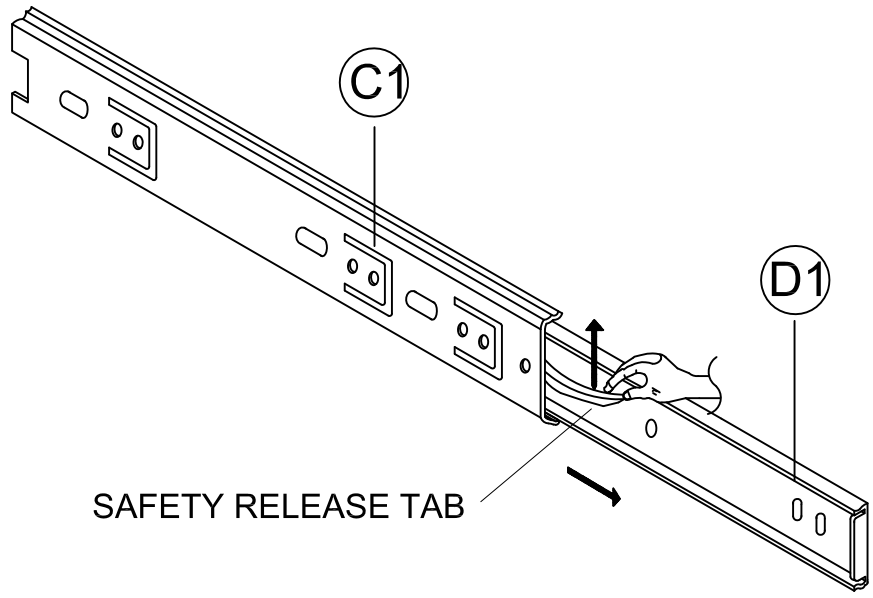

PRIOR TO ASSEMBLY, WE SUGGEST SEPARATING THE INNER GLIDES FROM THE OUTER-GLIDES, SIMPLY PULL THE LEFT/RIGHT INNER GLIDES FROM THE OUTER GLIDES EXPOSING A SMALL BLACK SAFETY RELEASE TAB, BY PUSHING THE SAFETY RELEASE TAB. YOU WILL BE ABLE TO SEPARATE THE GLIDE

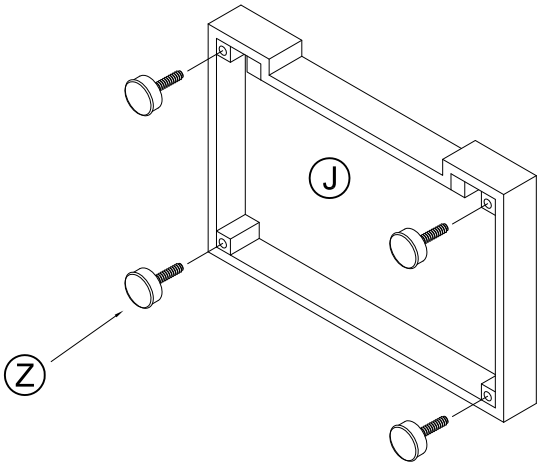

1). ASSEMBLE THE FEET(Z).

- ROTATE 4 FEET(Z) INTO THE HOLES IN THE BOTTOM PANEL(J).

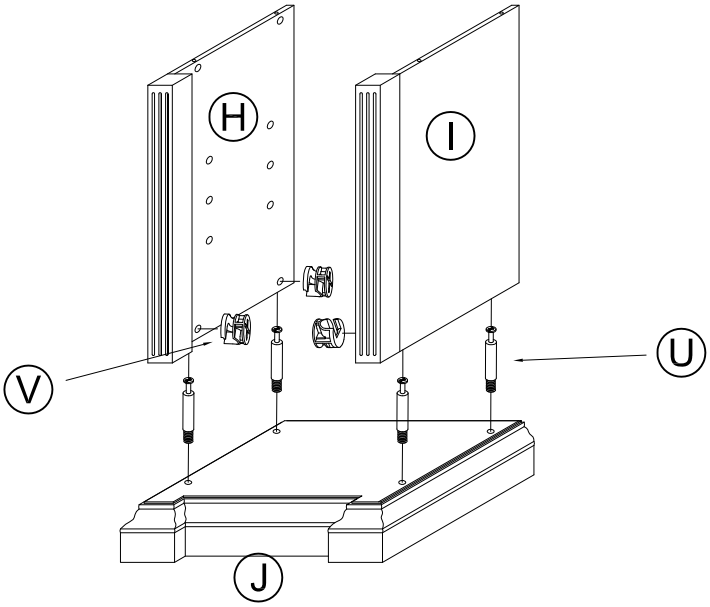

2). ASSEMBLE THE SIDE PANEL(H/ I).

- ROTATE 4 CAM-BOLTS(U) INTO THE HOLES IN THE BOTTOM PANEL(J).
- PLACE CAM-BOLTS(U) INTO THE HOLES IN THE PANEL(H/ I) AND ATTACH USING 4 CAM-LOCKS(V).

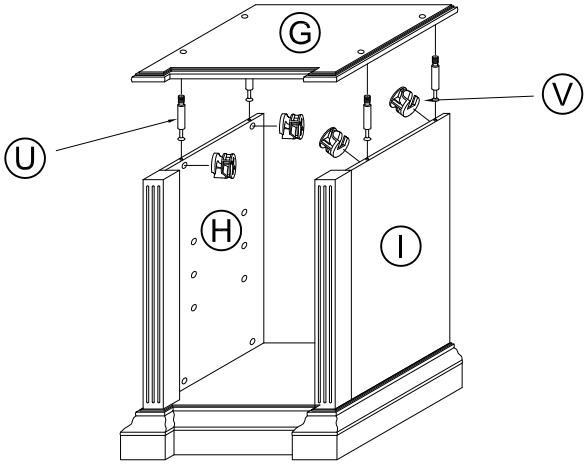

3). ASSEMBLE THE MIDDLE ACROSS PANEL(G).

- ROTATE 4 CAM-BOLTS(U) INTO THE HOLES IN THE MIDDLE ACROSS PANEL(G).
- PLACE CAM-BOLTS(U) INTO THE HOLES IN THE PANEL(H/ I) AND ATTACH USING 4 CAM-LOCKS(V).

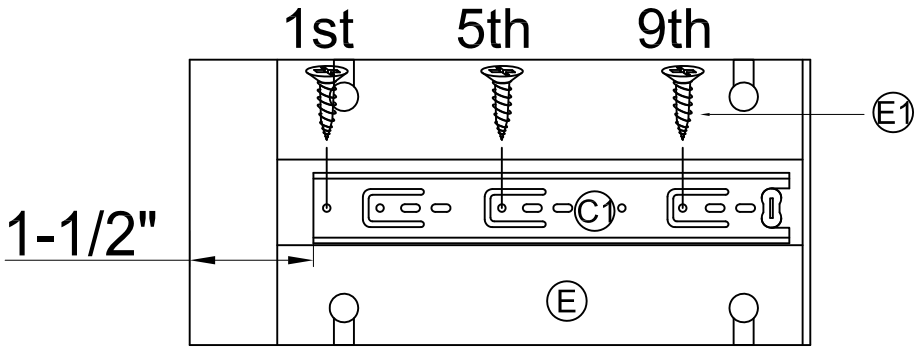

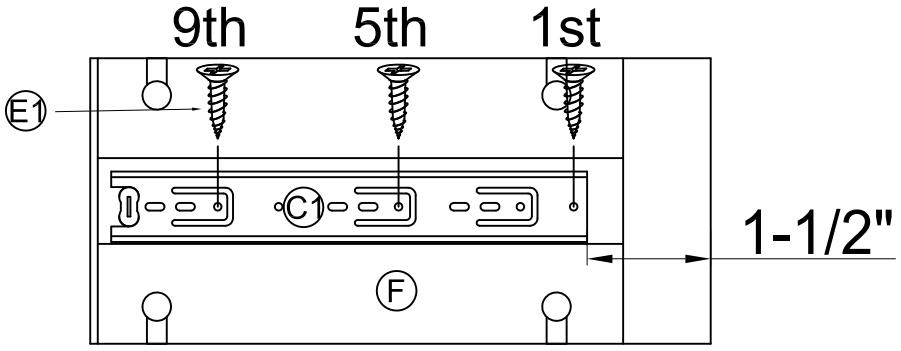

4). ASSEMBLE THE OUTER SLIDES(C1).

- ATTACH THE OUTER SLIDES(C1) TO MIDDLE SIDE PANEL(E/F) USING 6 SCREWS(E1).

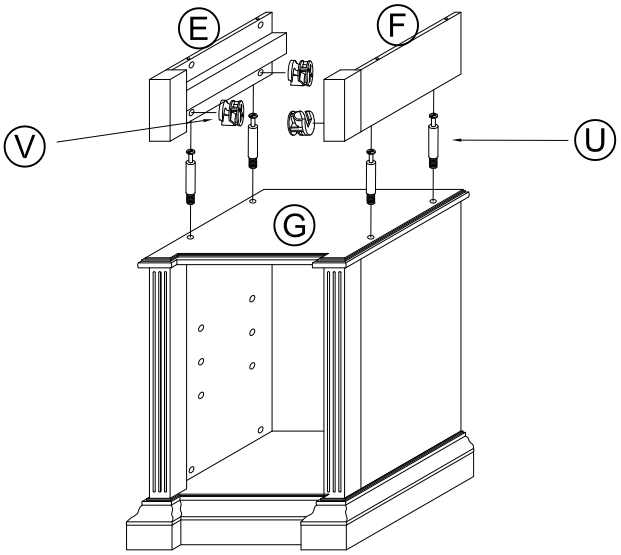

5). ASSEMBLE THE MIDDLE SIDE PANEL(E/F).

- ROTATE 4 CAM-BOLTS(U) INTO THE HOLES IN THE MIDDLE ACROSS PANEL(G).
- PLACE CAM-BOLTS(U) INTO THE HOLES IN THE PANEL(E/F) AND ATTACH USING 4 CAM-LOCKS(V).

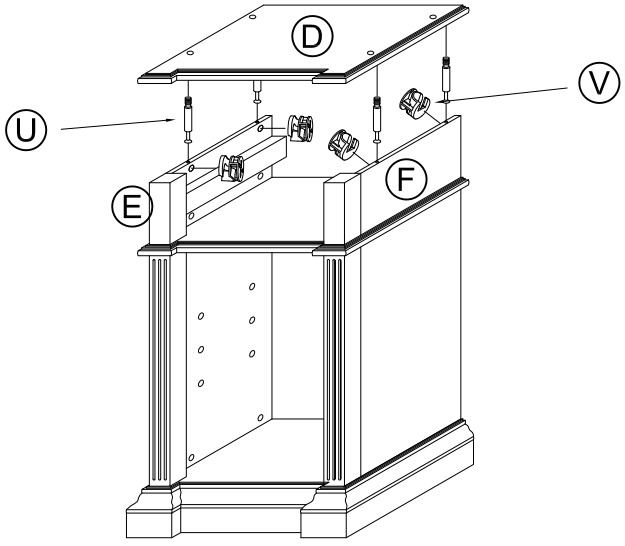

6). ASSEMBLE THE UP ACROSS PANEL(D).

- ROTATE 4 CAM-BOLTS(U) INTO THE HOLES IN THE UP ACROSS PANEL(D).
- PLACE CAM-BOLTS(U) INTO THE HOLES IN THE PANEL(E/F) AND ATTACH USING 4 CAM-LOCKS(V).

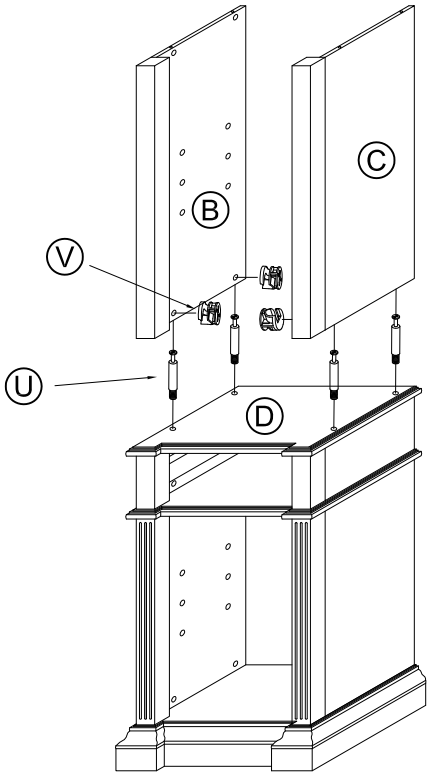

7). ASSEMBLE THE UP SIDE PANEL(B/C).

- ROTATE 4 CAM-BOLTS(U) INTO THE HOLES IN THE UP ACROSS PANEL(D).
- PLACE CAM-BOLTS(U) INTO THE HOLES IN THE PANEL(B/C) AND ATTACH USING 4 CAM-LOCKS(V).

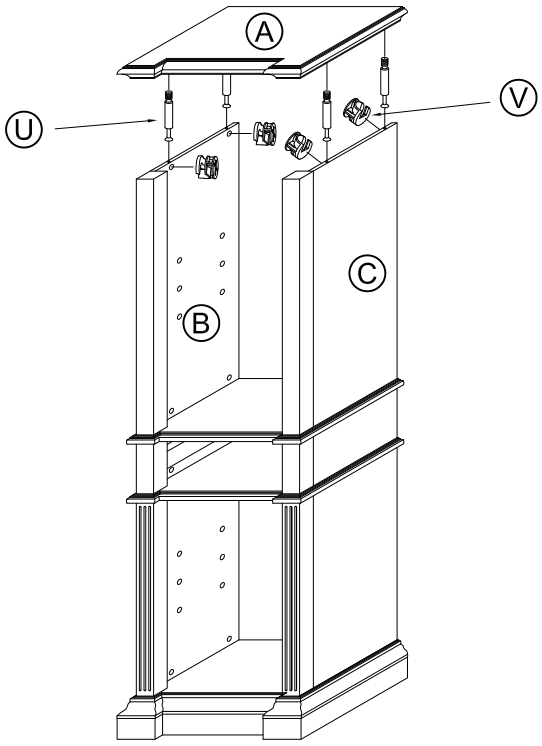

8). ASSEMBLE THE TOP PANEL(A).

- ROTATE 4 CAM-BOLTS(U) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE CAM-BOLTS(U) INTO THE HOLES IN THE PANEL(B/C) AND ATTACH USING 4 CAM-LOCKS(V).

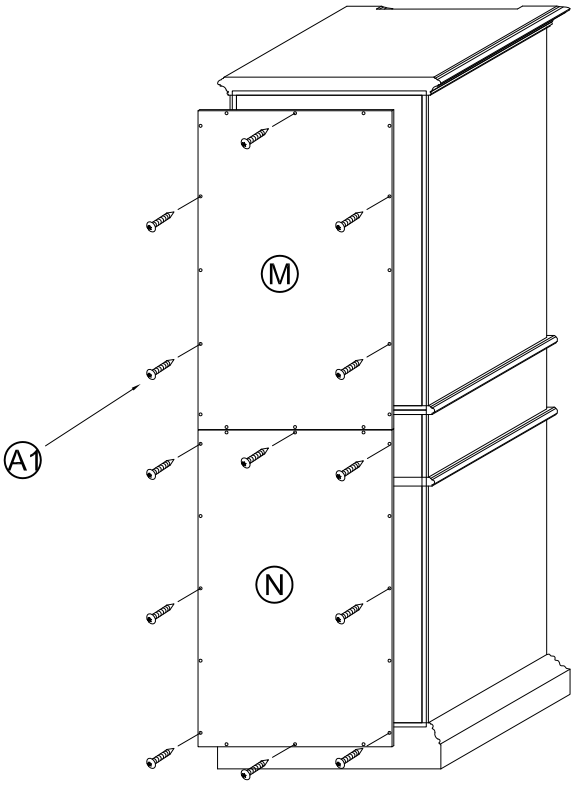

9). ASSEMBLE THE BACK PANEL(M/N).

- ATTACH THE BACK PANEL(M/N) USING 32 SCREWS(A1).

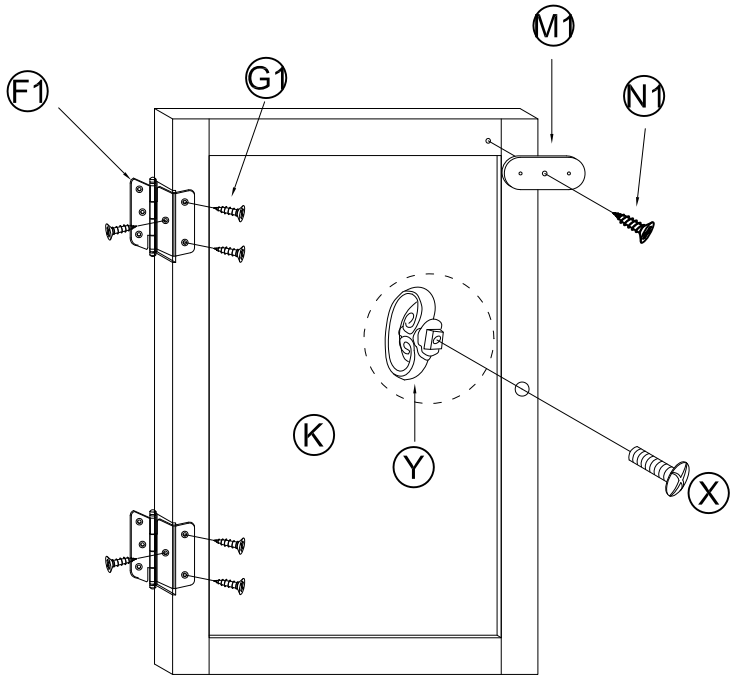

10). ASSEMBLE THE DOOR(K).

- ATTACH THE FEMALE MAGNET(M1) USING 1 SCREW(N1).
- ATTACH THE HANDLE(Y) TO DOOR(K) USING 1 SCREW(X).
- ATTACH 2 HINGES(F1) TO DOOR(K) USING 6 SCREWS(G1).

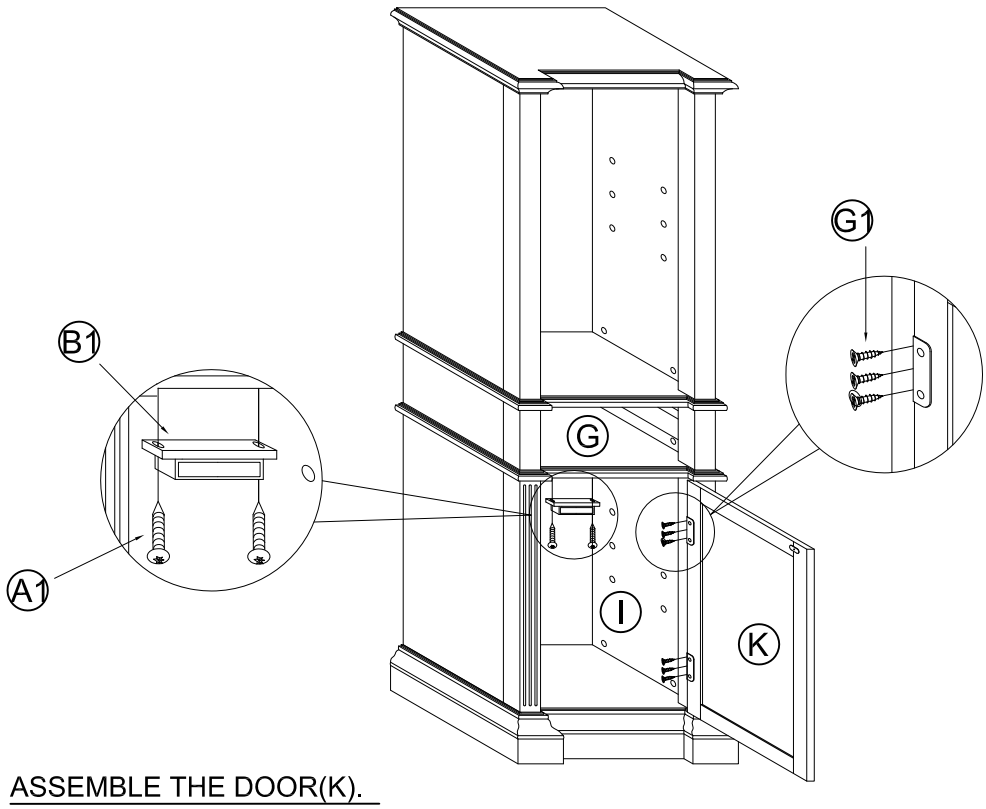

11). ASSEMBLE THE DOOR(K).

- ATTACH THE DOOR(K) TO DOWN RIGHT SIDE PANEL(I) USING 6 SCREWS(G1).
- ATTACH THE MAGNET(B1) TO MIDDLE ACROSS PANEL(G) USING 2 SCREWS(A1).

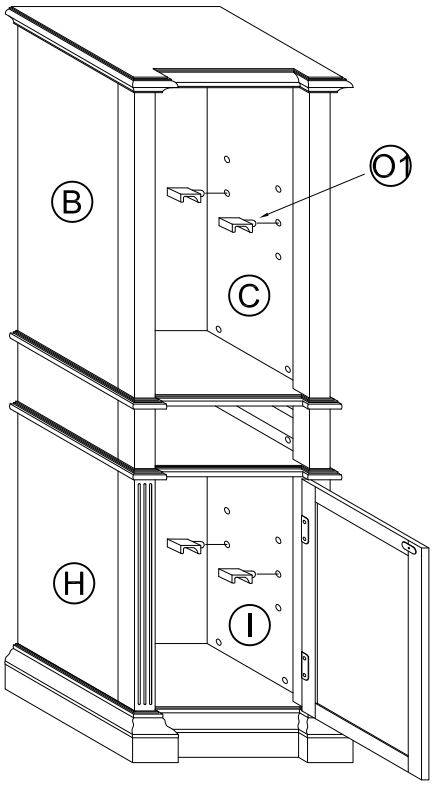

12). ASSEMBLE THE SHELF SUPPORTS(O1).

- INSERT 8 SHELF SUPPORTS(O1) INTO THE HOLES IN THE PANEL(B/C/H/I).

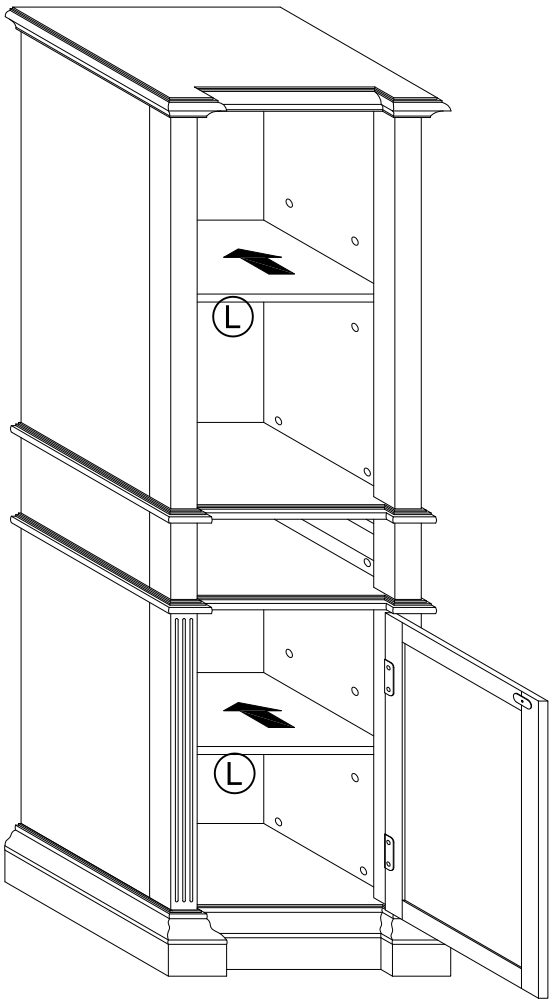

13). ASSEMBLE THE SHELVES(L).

- PUT THE SHELVES(L) ONTO THE SHELF SUPPORTS(O1).

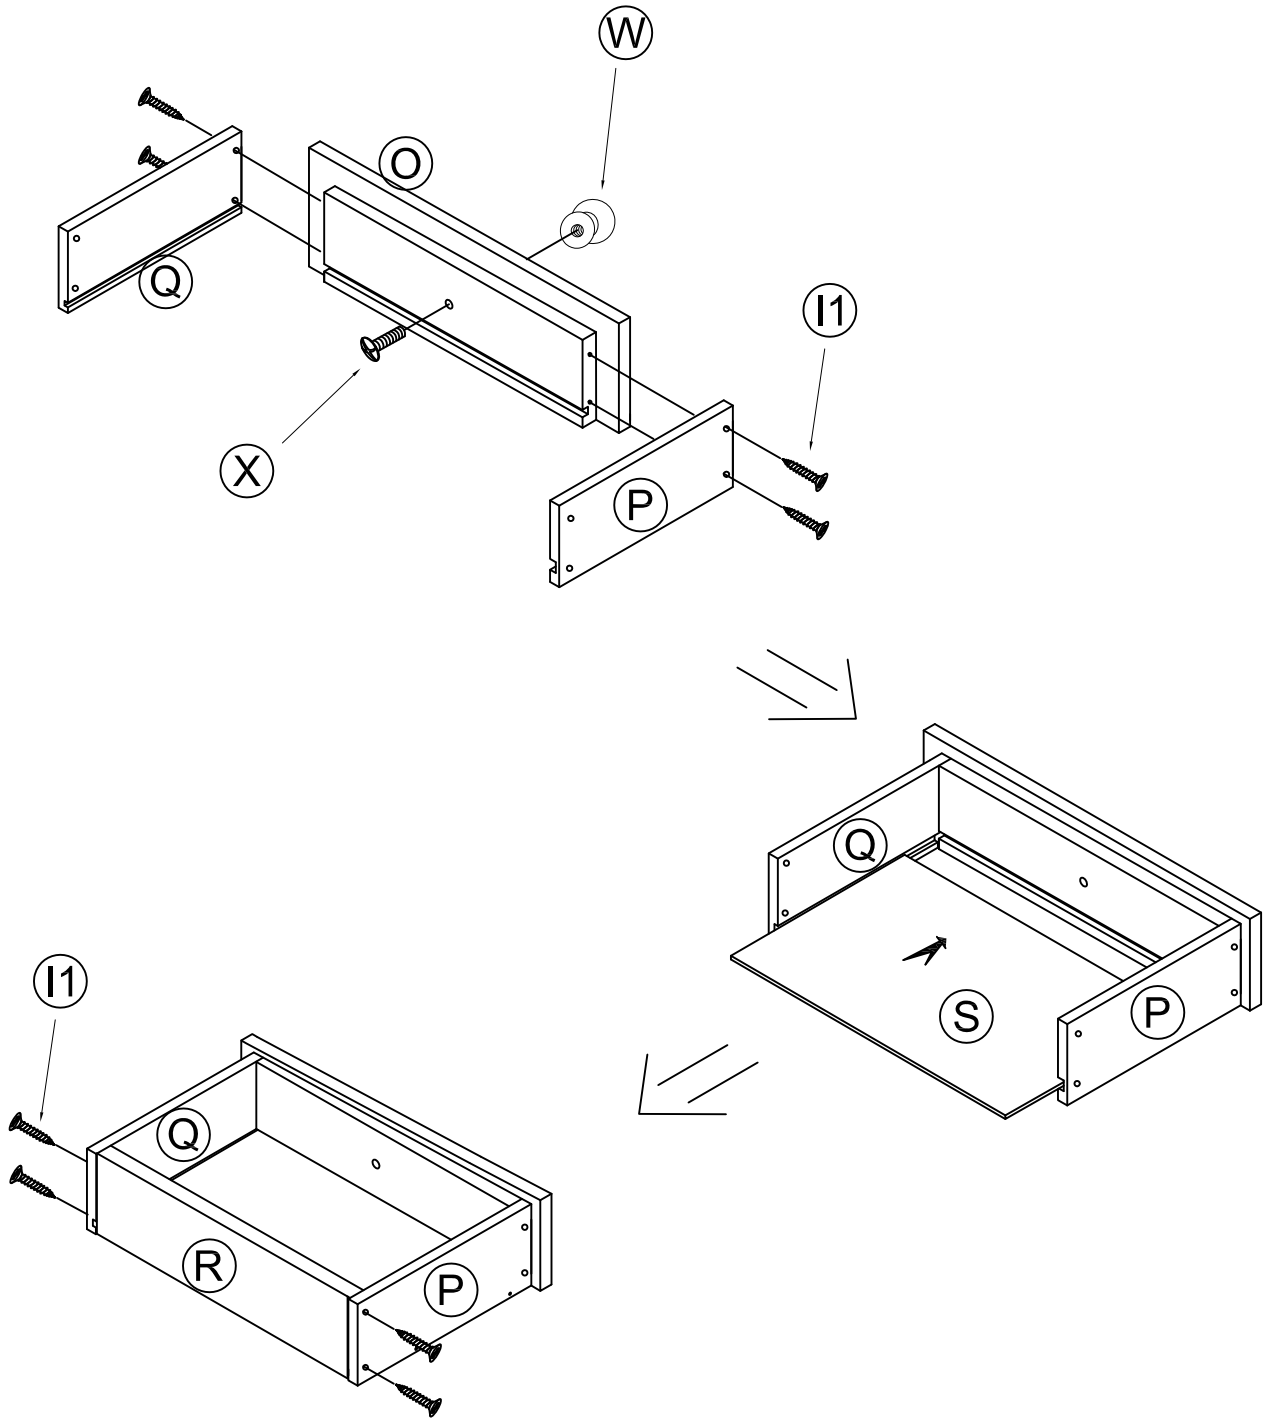

14). ASSEMBLE THE DRAWER.

- ATTACH DRAWER PANEL SIDE(P/Q) USING 4 SCREWS(I1).
- ATTACH THE KNOB(W) TO DRAWER PANEL FRONT(O) USING 1 SCREW(X).
- INSERT THE DRAWER BOTTOM PANEL(S) INTO THE SLOTS IN THE DRAWER PANEL SIDE(P/Q).
- ATTACH DRAWER PANEL BACK(R) BETWEEN LEFT DRAWER PANEL SIDE(P) AND RIGHT DRAWER PANEL SIDE(Q) USING 4 SCREWS(I1).

ARROW FACES DRAWER FRONT

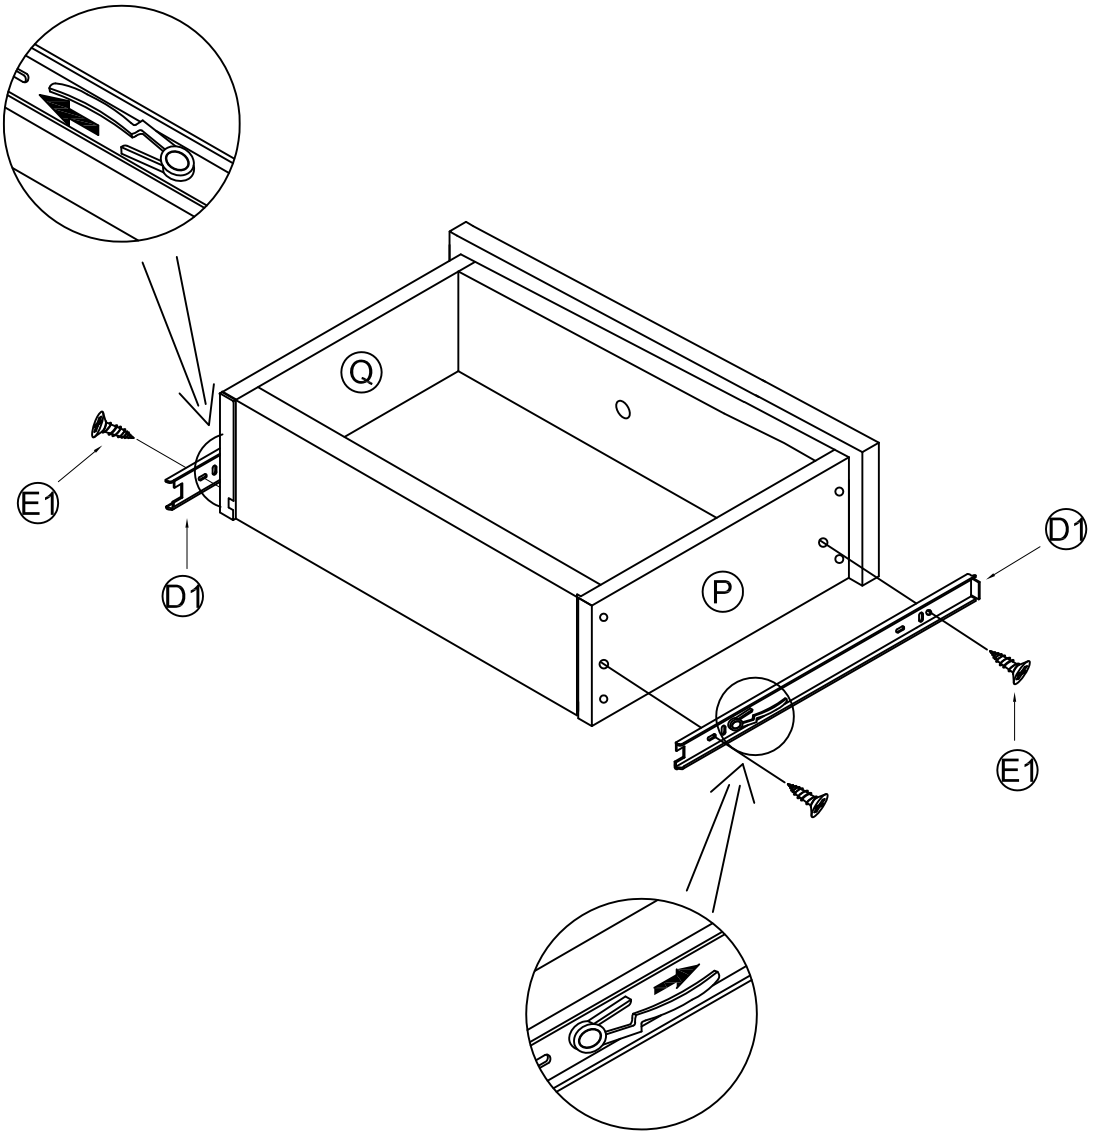

ARROW FACES DRAWER FRONT

15). ASSEMBLE THE INNER SLIDERS(D1).

- ATTTACH 2 INNER SLIDERS(D1) TO DRAWER PANEL SIDE(P/Q) USING 4 SCREWS(E1).

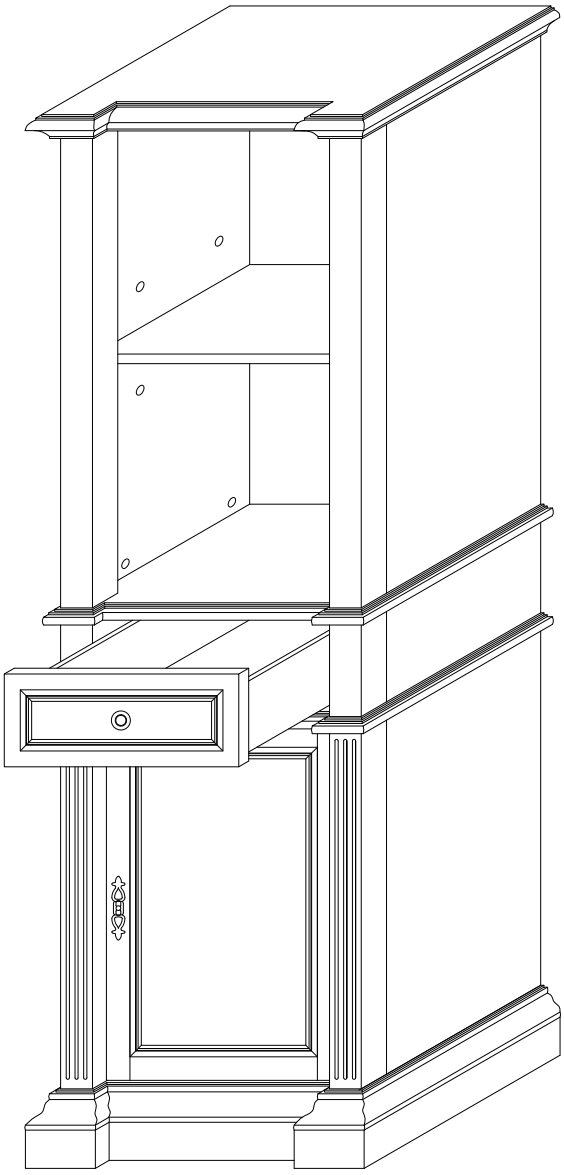

16). ASSEMBLE THE DRAWER.

- INSERT THE DRAWER INTO THE SLIDERS.

Warning

The anti-tip hardware must be used as part of assembly!

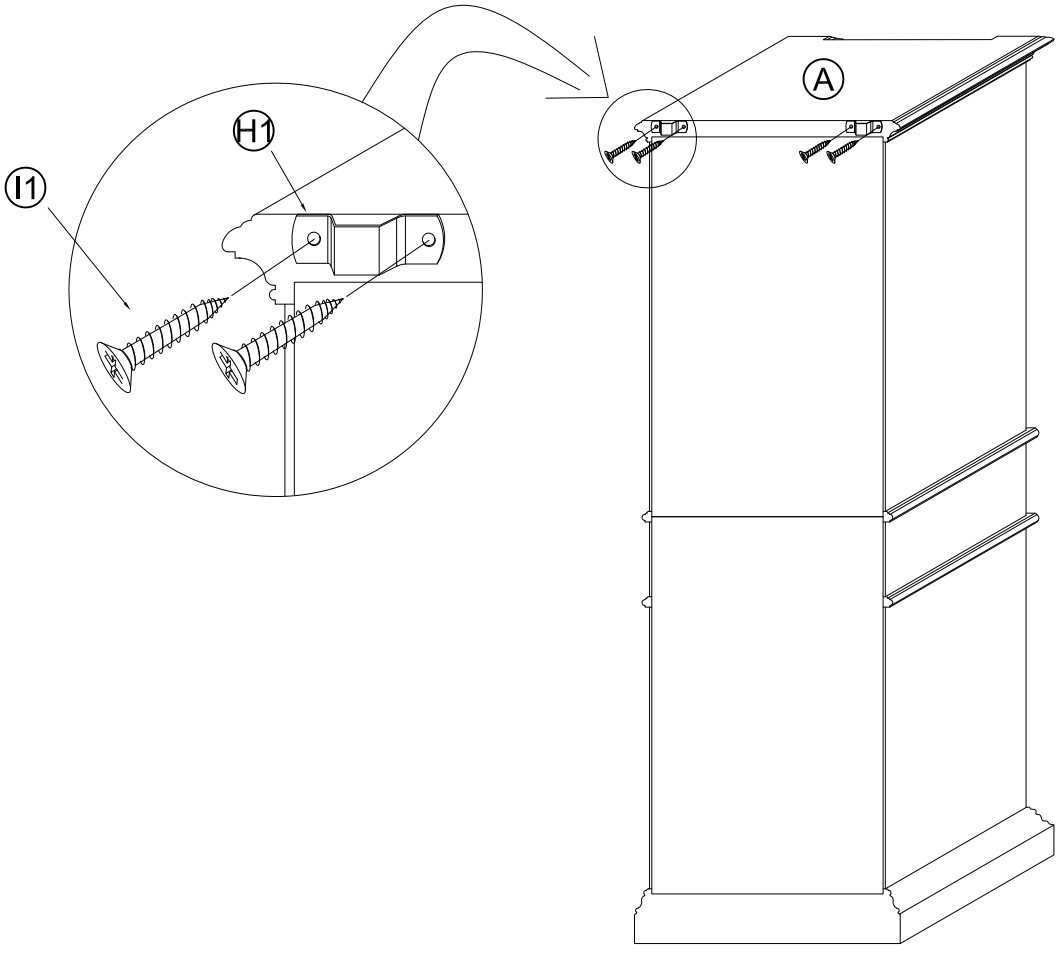

17). ASSEMBLE THE HOOKS(H1).

- ATTACH 2 HOOKS(H1) TO TOP PANEL(A) USING 4 SCREWS(I1).

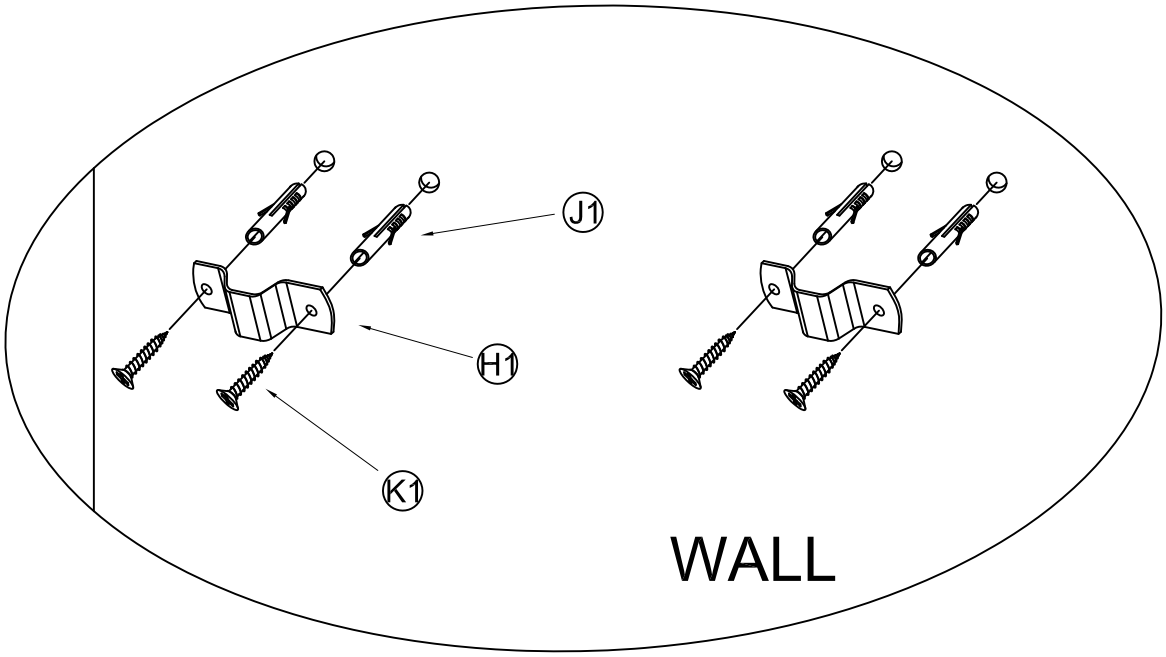

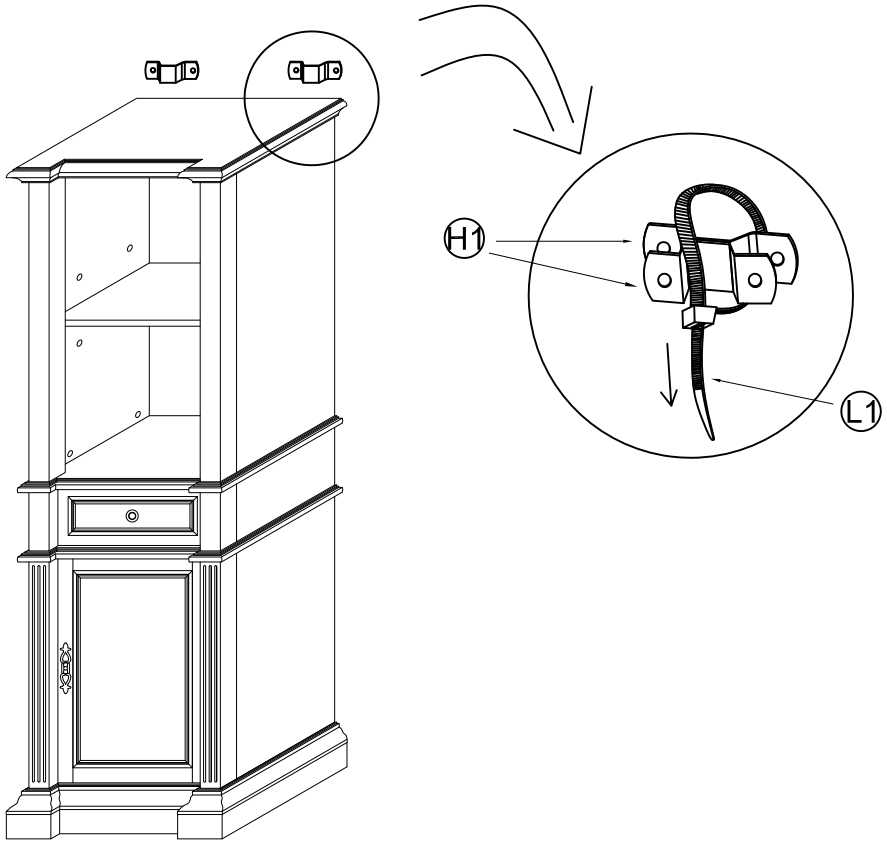

18). ASSEMBLE THE ANTI-TIP HARDWARE.

- DRILL 4 HOLES INTO THE WALL, PLEASE REFER TO THE REAR TOP PANEL'S HOLE DISTANCE AND HEIGHT.
- PUT 4 GECKOS(J1) INTO THE HOLES IN THE WALL AND ROTATE 4 SCREWS(K1) INTO THE GECKOS(J1).
- CONNECT THE TWO HOOKS(H1) WITH A PLASTIC BELT(L1).